


## INTRODUCTION

This maintenance schedule given below describes the maintenance requirements for the **Bonneville, Bonneville T100, Speedmaster** and **Bonneville America** models.



**WARNING:** The importance of good maintenance cannot be overestimated. The tasks described will help to ensure the safe and reliable operation of your Triumph motorcycle. Never attempt to cut costs by neglecting the maintenance requirements of your machine as this will result in the premature failure of the component(s) concerned and may lead to an unsafe riding condition and an accident.

## Scheduled Maintenance Chart

Scheduled Maintenance Chart						
Operation Description	Odometer Reading in Miles (Kms) or time period, whichever comes first.					
	Every	500 (800) 1 month	4000 (6000) 1 year	8000 (12000) 2 years	12000 (18000) 3 years	16000 (24000) 4 years
Engine/oil cooler - check for leaks	Day	●	●	●	●	●
Engine oil - renew	-	●	●	●	●	●
Engine oil filter - renew	-	●	●	●	●	●
Valve clearances - check/adjust	-			●		●
Cam chain - wear check	-					●
Air cleaner - renew	-			●		●
Spark plugs - check	-		●	●		●
Spark plugs - renew	-				●	
Carburetors - balance	-			●		●
Idle CO level - check and adjust	-			●		●
Throttle cables and choke mechanism - check/adjust	Day	●	●	●	●	●
Fuel system - check for leaks.	Day	●	●	●	●	●
Lights, instruments & electrical systems - check	Day	●	●	●	●	●
Steering - check for free operation	Day	●	●	●	●	●
Steering head bearings - check/adjust	-			●		●
Steering head bearings - lubricate	-			●		●
Forks - check for leaks/smooth operation	Day	●	●	●	●	●
Fork oil - renew	-					●
Brake fluid levels - check	Day	●	●	●	●	●
Brake fluid - renew	Every 2 years					
Brake hoses - renew	Every 4 years					
Brake pad wear - check	Day	●	●	●	●	●
Brake master cylinder - renew seals	Every 4 years					
Brake calipers - renew seals	Every 4 years					
Drive chain - lubricate	Every 200 miles (300 kms)					
Drive chain - wear check	Every 500 miles (800 kms)					

**Scheduled Maintenance Chart (continued)**

Operation Description	Odometer Reading in Miles (Kms) or time period, whichever comes first.					
	Every	500 (800) 1 month	4000 (6000) 1 year	8000 (12000) 2 years	12000 (18000) 3 years	16000 (24000) 4 years
Drive chain slack - check/adjust	Day	●	●	●	●	●
Drive chain rubbing strip - check	-		●	●	●	●
Rear suspension - lubricate	Every 3 years/18000 miles (30000 kms)					
Fasteners - inspect visually for security	Day	●	●	●	●	●
Wheels - inspect for damage	Day	●	●	●	●	●
Tyre wear/tyre damage - check	Day	●	●	●	●	●
Tyre pressures - check/adjust	Day	●	●	●	●	●
Clutch cable - check/adjust	Day	●	●	●	●	●
Fuel hose - renew	-			●		●
Evaporative hoses* - renew	Every 4 years					
Secondary air injection system - clean and reset	-			●		●
Airbox hose - drain	-		●	●	●	●

\*Evaporative hoses on California models only.